



Nivel de Transición by ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR POLUK 4

Desde ARGOS INT (R336 / D40 NW BAL) continuar en R336 (TR156°). Cruzar ARGOS INT FL150 o superior, D30 NW FL120 o superior, directo a BAL VOR/DME 7000FT o superior, luego según autorización ATC.

From ARGOS INT (R336 / D40 NW BAL) continue on R336 (TR156°). Cross ARGOS INT at or above FL150, D30 NW at or above FL120, direct to BAL VOR/DME at or above 7000FT, then according to ATC clearance.

DASA / SECCION AIS-MAP