



Nivel de Transición by ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR AYSEN 4

Desde ARGOS INT (R336 / D40 NW BAL) continuar en R336 (TR156°). Cruzar ARGOS INT FL150 o superior, D30 NW FL120 o superior. En D23 NW viraje derecha para orbitar D20 en descenso para 7000FT o según autorización ATC.

From ARGOS INT (R336 / D40 NW BAL) continue on R336 (TR156°). Cross ARGOS INT at or above FL150, D30 NW at or above FL120. On D23 NW turn right to join D20 descending to 7000FT or according to ATC clearance.

DASA / SECCION AIS-MAP