



Nivel de Transición by ATC
Transition Level by ATC

No se ajusta a escala / Not to scale

STAR's RNAV RWY 27

LAPOL 1: Desde LAPOL directo a BA220 - NEBAL. Cruzar LAPOL FL110 o superior, BA220 7000FT o superior, NEBAL 6000 FT o superior, luego según autorización ATC.

LAPOL 1: From LAPOL direct to BA220 - NEBAL. Cross LAPOL at or above FL110, BA220 at or above 7000FT, NEBAL at or above 6000FT, then according to ATC clearance.

PARET 1: Desde PARET directo BA304 - BA237 - SUPAM. Cruzar PARET FL170 o superior, BA304 FL100 o superior, BA237 FL80 o superior, SUPAM 6000FT o superior, luego según autorización ATC.

PARET 1: From PARET direct to BA304 - BA237 - SUPAM. Cross PARET at or above FL170, BA304 at or above FL100, BA237 at or above FL80, SUPAM at or above 6000FT, then according to ATC clearance.