


IQUIQUE

RDR 128.3

ATACAMA

APP 120.3

TWR 118.3

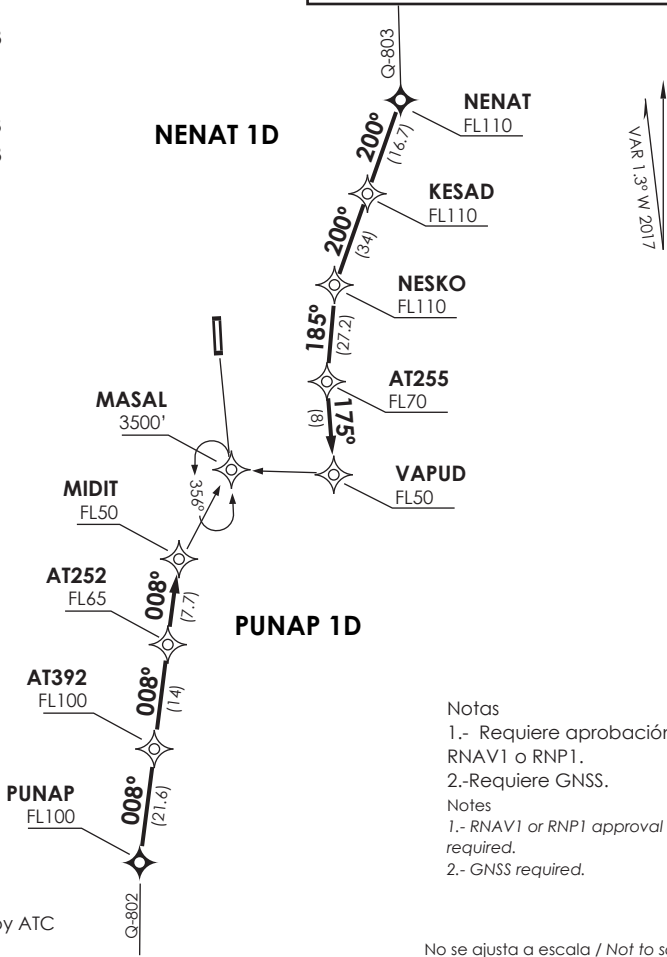

- Notas
 1.- Requiere aprobación RNAV1 o RNP1.
 2.-Requiere GNSS.
- Notes
 1.- RNAV1 or RNP1 approval required.
 2.- GNSS required.

Nivel de Transición by ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR NENAT 1D / PUNAP 1D RNAV

NENAT 1D: Desde NENAT proceder directo a KESAD-NESKO-AT255-VAPUD. Cruzar NENAT a FL110 o superior, KESAD FL110 o superior, NESKO FL110 o superior, AT255 FL70 o superior VAPUD FL50 o superior, luego según autorización ATC.

NENAT 1D: From NENAT proceed direct to KESAD-NESKO-AT255-VAPUD. Cross NENAT at or above FL110, KESAD at or above FL110, NESKO at or above FL110, AT255 at or above FL70, VAPUD at or above FL50, then according to ATC clearance.

PUNAP 1D: Desde PUNAP proceder directo a AT392-AT252-MIDIT. Cruzar PUNAP FL100 o superior, AT392 FL100 o superior, AT252 FL65 o superior, MIDIT FL50 o superior, luego según autorización ATC.

PUNAP 1D: From PUNAP proceed direct to AT392-AT252- MIDIT. Cross PUNAP at or above FL100, AT392 at or above FL100, AT252 at or above FL65, MIDIT at or above FL50, then according to ATC clearance.

DASA / SECCION AIS-MAP