



**PTO. MONIT**  
 RDR 128.3 / 119.7

**BALMACEDA**  
 TWR 118.5

Nivel de Transición by ATC  
 Transition Level by ATC

No se ajusta a escala / Not to scale

**STAR OPURA 1A / ARGOS 1A**

**OPURA 1A:** En OPURA INT ( D40 NW BAL) abandonar AWY para interceptar R336 (TR156°). Cruzar OPURA INT FL100 o superior, D30 NW FL100 o superior, directo a BAL VOR/DME 7000FT o superior, luego según autorización ATC.

**OPURA 1A:** At OPURA INT (D40 NW BAL) leave AWY to intercept R336 (TR156°). Cross OPURA INT at or above FL100, D30 NW at or above FL100, direct to BAL VOR/DME at or above 7000FT, then according to ATC clearance.

**ARGOS 1A:** Desde ARGOS INT ( D40 NW BAL) continuar en R336 (TR156°). Cruzar ARGOS INT FL110 o superior, D30 NW FL100 o superior, directo a BAL VOR/DME 7000FT o superior, luego según autorización ATC.

**ARGOS 1A:** From ARGOS INT (D40 NW BAL) continue on R336 (TR156°). Cross ARGOS INT at or above FL110, D30 NW at or above FL100, direct to BAL VOR/DME at or above 7000FT, then according to ATC clearance.

DASA / SECCION AIB-MAP