


VAR 0.2° W 2011

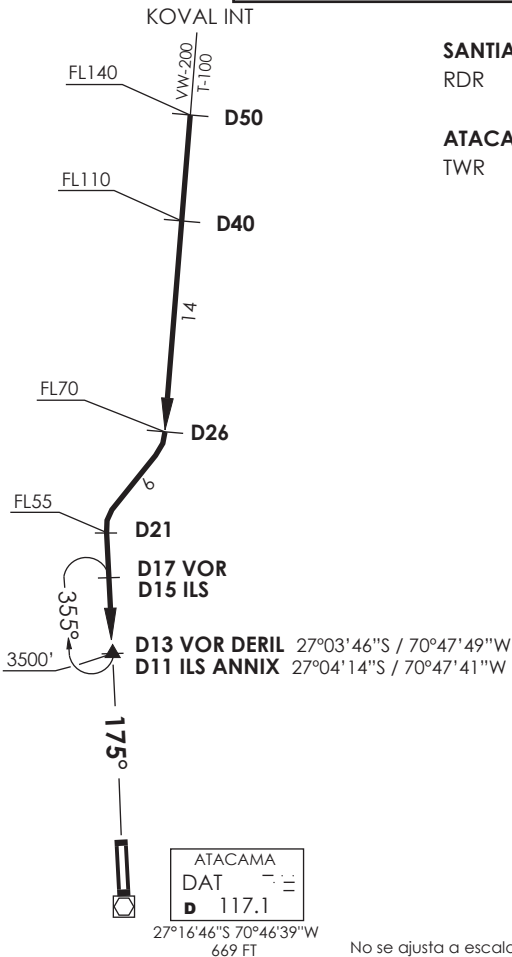

**SANTIAGO**  
 RDR 128.3

**ATACAMA**  
 TWR 118.3

Nivel de Transición by ATC  
 Transition Level by ATC

ATACAMA  
 DAT 117.1  
 27°16'46"S 70°46'39"W  
 669 FT

No se ajusta a escala / Not to scale

**STAR LOBOS 1**

En AWY VW-200, T-100 cruzar D50 N DAT FL140 o superior, D40 N FL110 o superior, D26 N FL70 o superior, posterior viraje derecha para interceptar R355 (TR175°) DAT VOR/DME. Cruzar D21N FL55 o superior, luego continuar descenso a 3500FT o según autorización ATC.

On AWY VW-200, T-100 cross D50 N DAT at or above FL140, D40 N at or above FL110, D26 N at or above FL70, then turn right to intercept R355 (TR175°) DAT VOR/DME. Cross D21 N at or above FL55, then continue descent to 3500FT or according to ATC clearance.

DASA / SECCION AIS-MAP